


FTP Compact Keystone


Termination Instructions

1

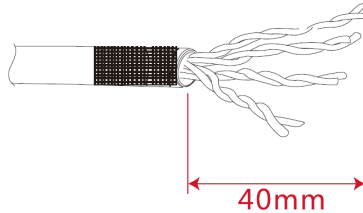


Remove 40mm of cable outer jacket.

2

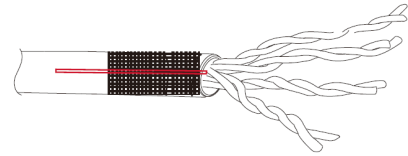


Sandwich drain wire between 2 layers of the supplied foil and then trim any excess.

3

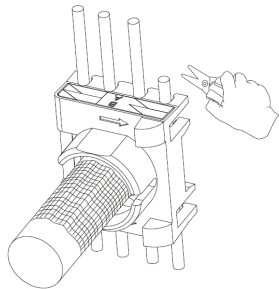


Insert the cable through the termination cap ensuring the cap fits just on the end of where the cable is stripped back to, untwist the four pairs and fan out. Following the colour code on the cap, insert the wires into their designated slots. Double check the wires are in the correct positions and then trim off the excess.

4

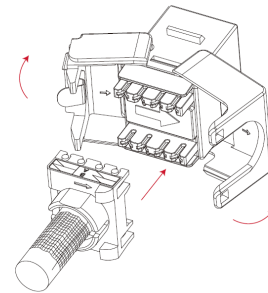


Position the termination cap on the keystone IDCs, in the correct orientation using the arrows.

5

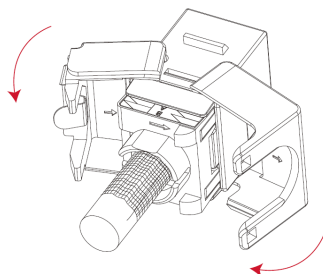

Push the termination cap down and then close the wings.

6

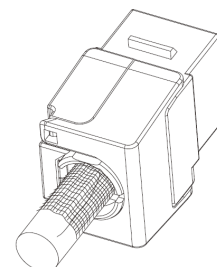

Assemble the keystone jack on face plate or patch panel – this doesn't require excess pressure.

